



Surge Protection

For comprehensive protection of a luminaire against electrical surges, surge protection shall be installed on the mains supply where required to protect luminaires and drivers from transient voltage damage.

For warranty information visit unios.com/warranty

Please read these installation instructions carefully before installing this luminaire. This product must be installed and maintained by a suitably qualified person/s in compliance with the latest applicable regulations and relevant legislation. Unios does not warrant any claim based on defects or damage caused by misuse, improper installation, improper operation and/or modifications carried out by the purchaser or third parties. This luminaire will not be used as a 'Working light' during construction. This will result in the warranty of the luminaire to be void. For warranty duration, please refer to the data sheet.

Cleaning

Always clean carefully using a soft cloth and a ph-neutral, alcohol-free, non-abrasive cleaning cloth. Clean & Maintain the finish twice a year to avoid rust, oxidation or limescale deposits. If this entire surface is not cleaned correctly, the finish may become uneven.

Do not use abrasive pads, discs, sandpaper and/or high pressure hose/gun to clean the luminaire.

Disposal

Ensure correct disposal of this product (waste electrical and electronic equipment)



Creo

READING WALL LIGHT

 
Base Codes	Creo Wall light CREO0003	IP20  			
	Class I 220–240V ~ 50/60Hz	Material Aluminium	Operating Temp <25°C	Install Person/s 1x 	Power 3 Watts




CAUTION – This product must be installed by a qualified installer

Please read instruction manual carefully before installing luminaire

Front View



Side View

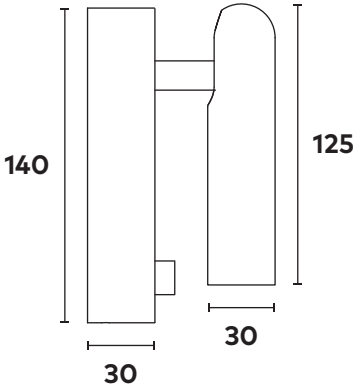 

Parts & Accessories

1x  2mm Hex Allen Key Included	2x  M4 25mm Screws Included	2x  M4 Wall Plug Included
--	---	---



Product Installation

CAUTION

Switch off main electrical power prior to installing and powering this luminaire.

Do not open luminaire whilst the main electrical power is active.

Remove mounting bracket from luminaire using provided allen key.

 
Fasten bracket to surface using supplied 2x M4 screws
(Anchors are not included)

Match polarity and connect L-E-N to terminal block (Refer to wiring)

Attach luminaire to mounting bracket and tighten screws using provided allen key

Tilt (up to 60°) and rotate (up to 350°)
product as desired


Wiring

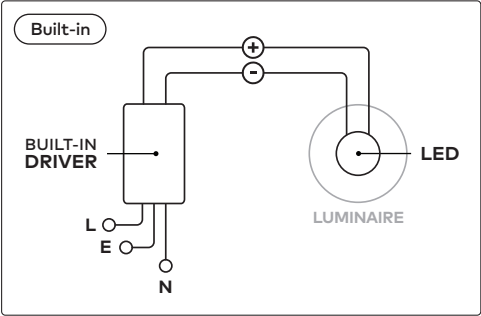

Dimming

Luminaire includes a built-in dial dimmer.
No remote dimmer can be installed on circuit

 Mounting Bracket

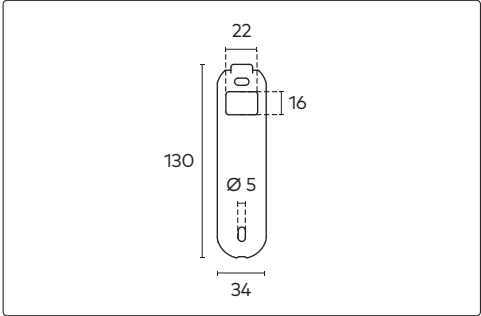

All measurements are in millimetres.

